





Thoroughly clean urinal bowl and floor beneath the bowl.

Make sure bowl is completely dry and free from any dirt or residue.

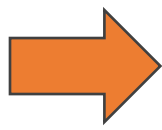


Lay the roll on the floor and pull up to position the message on the bowl.

Allow the wrap to touch the bottom of the bowl so it clings.

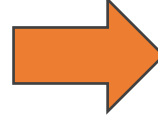


Stretch wrap over the top of the bowl and around the edges.

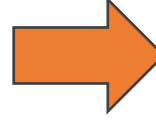


Stretch out and around the edges on all sides making sure there is enough tension for the wrap to cling neatly.




That's a wrap!

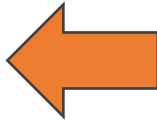

Smooth down the wrap on all sides of the bowl to make it neat all round.

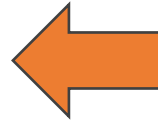

Using a safety-retractable blade, cut around the wrap.

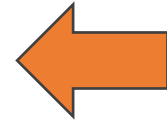

Stretch the wrap upwards and over the top of the urinal.

The wrap is extremely thin, so use very little pressure to make sure you avoid damaging or marking the urinal bowl.